

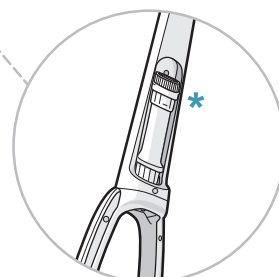
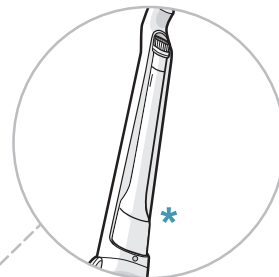
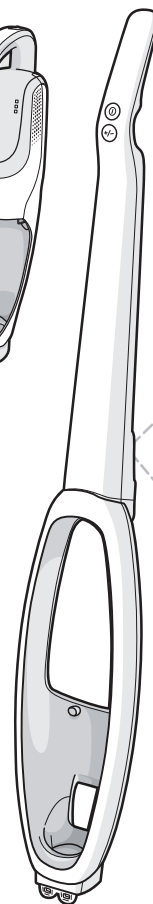
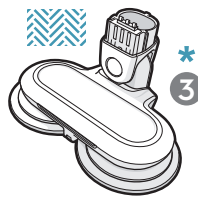
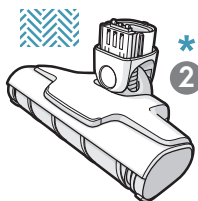
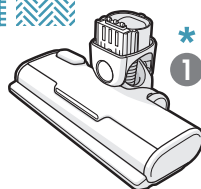


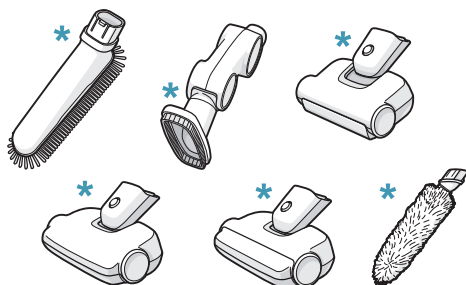

Instruction Book

Clean 500 Animal 500 Hygenic 500




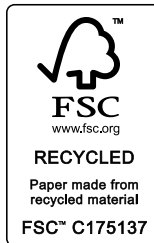







*

Accessories may vary from model to model. | Les accessoires peuvent varier d'un modèle à l'autre. | Ausstattung und Zubehör kann je nach Modell variieren. | Accessoires kunnen per model verschillen. | Tilbehøren kan variere mellan olika modeller. | Lisävarusteet voivat vaihdella malleittain. | Tilbehør kan variere fra model til model. | Tilbehør kan variere fra modell til modell. | Los accesorios pueden variar según el modelo. | Os acessórios podem variar de modelo para modelo. | Gli accessori possono variare da modello a modello. | Τα εξαρτήματα ίσως διαφέρουν από μοντέλο σε μοντέλο. | Lisad võivad mudelist mudelisse varieeruda. | Priedai kitiems modeliams gali skirtis. | Aksesoria mogą się różnić w zależności od modelu. | Piederumi katram modelim var atšķirties. | Příslušenství se může u jednotlivých modelů lišit. | Doplnky sa môžu lišiť v závislosti od modelu. | Dodaci se mogu razlikovati kod određenih modela. | Nastavki se lahko glede na model razlikujejo. | Принадлежности могут отличаться от модели к модели. | Ці компоненти можуть відрізнятися залежно від моделі. | A tartozékok típusonként eltérőek lehetnek. | Accessoriole pot diferi de la model la model. | Принадлежностите може да се различават според различните модели. | Aksesuarları modelden modele farklılık gösterebilir. | درجہ ذیل لوازم مختلف ماڈلوں کے لیے دستیاب ہیں۔ | Доплаци могу да се разликују у зависности од модела усисивача. | 仅特定机型提供

www.electrolux.com

** 18V : ADS-I3G-22 25013GPG
** 21.6V/25.2V : KSC-18W-350050HE

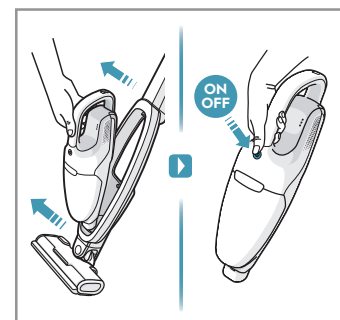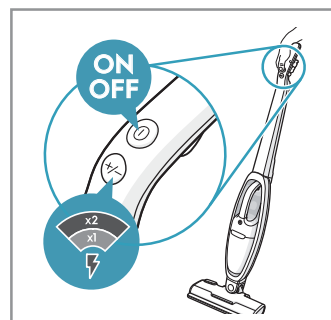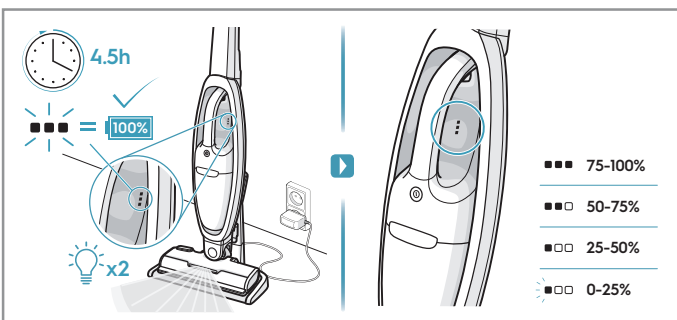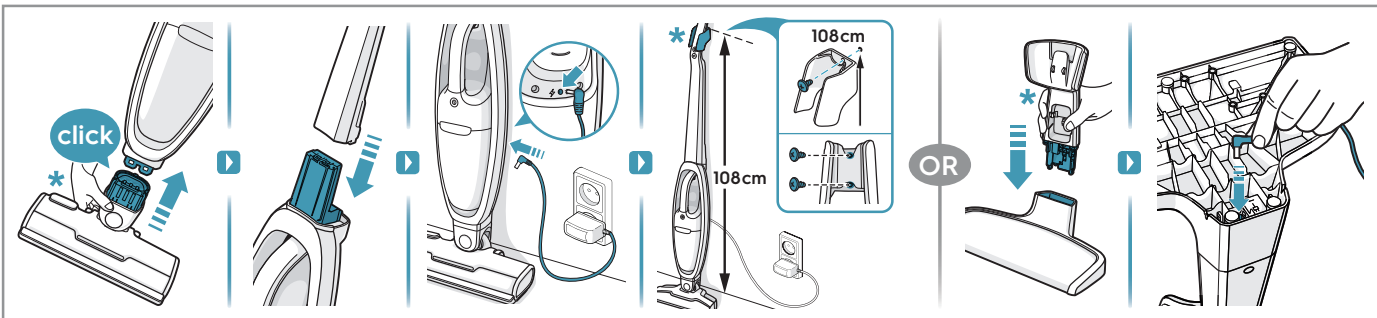

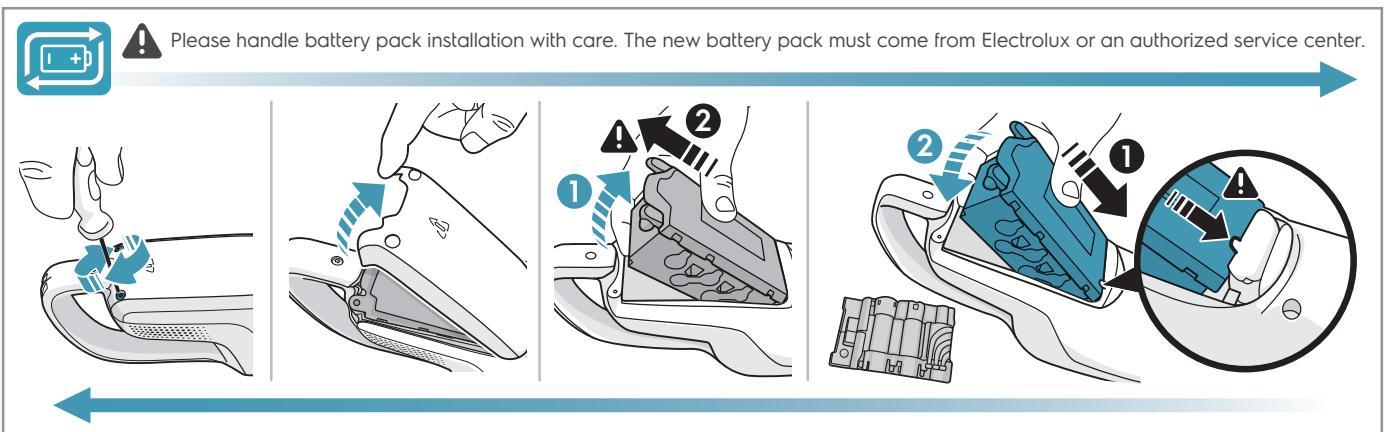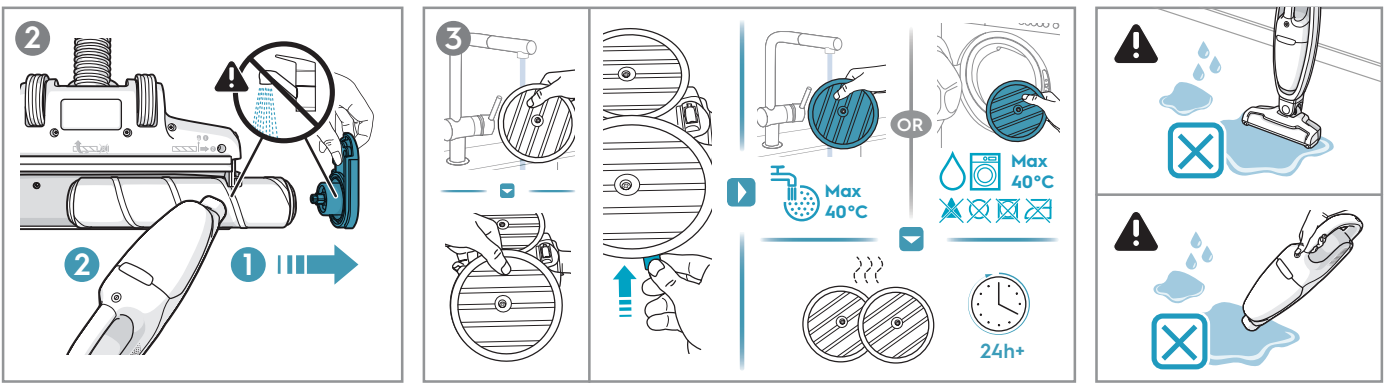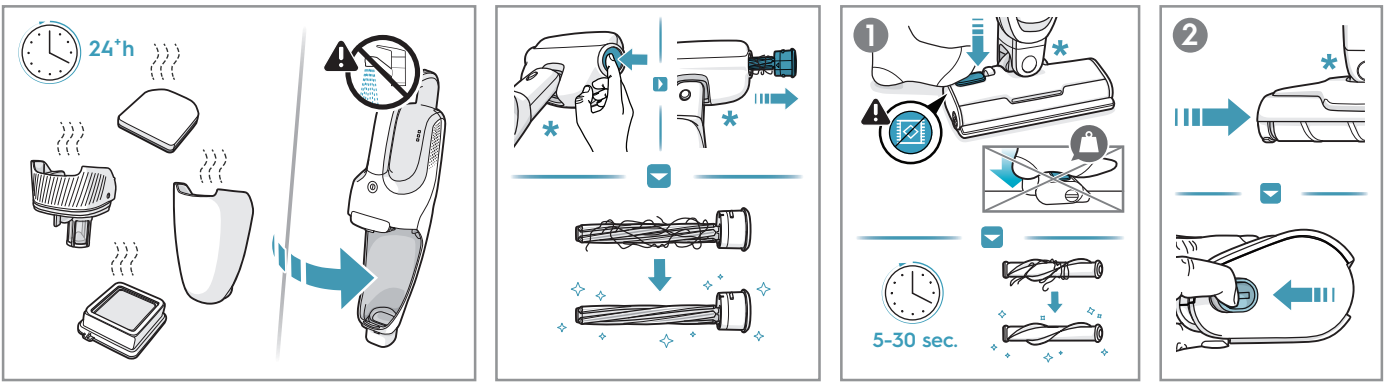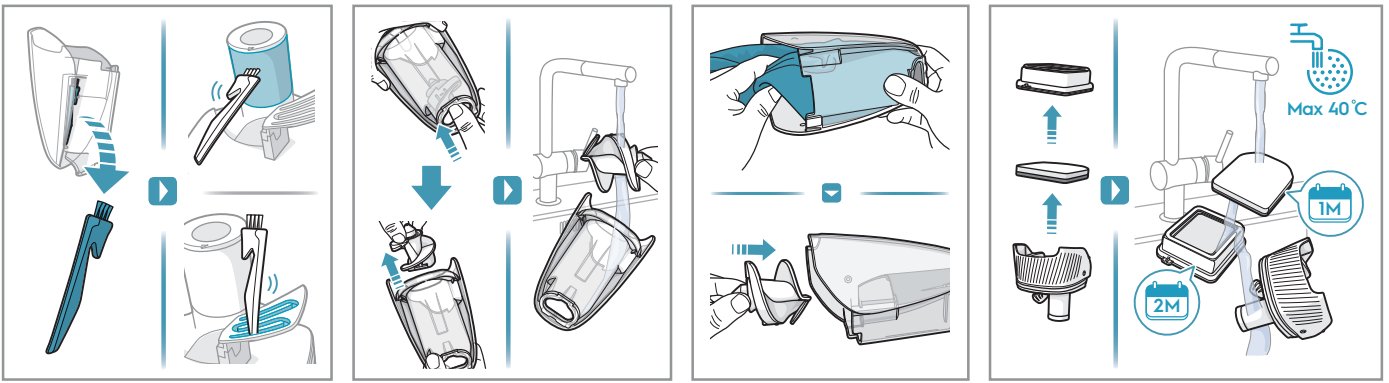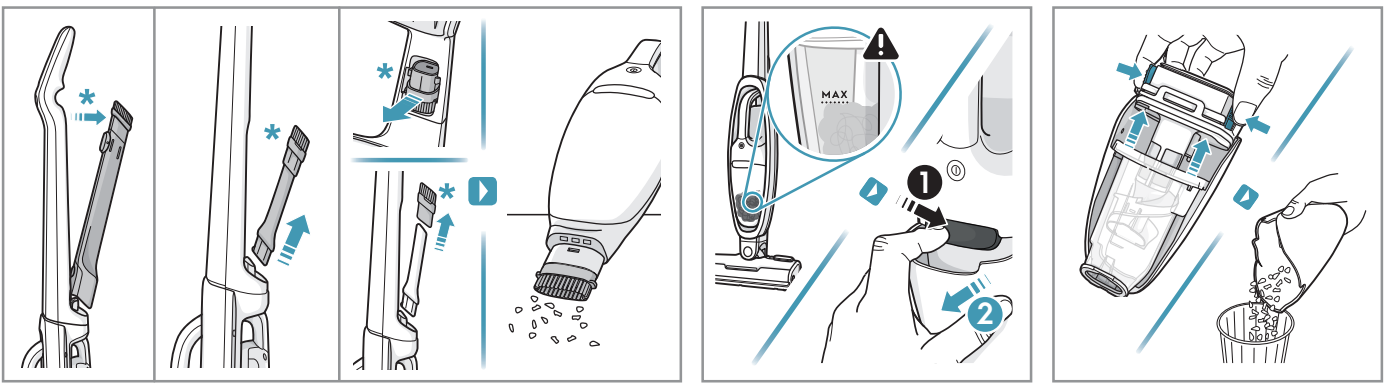

! Please handle battery pack installation with care. The new battery pack must come from Electrolux or an authorized service center.

