

PHILIPS


AMBILIGHT tv

Quick Start Guide


OLED760/OLED770 Series




Tool needed
for assembly

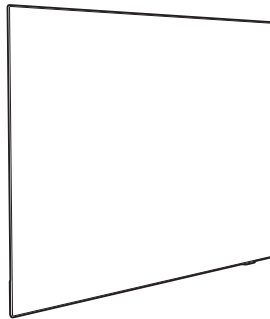


48"

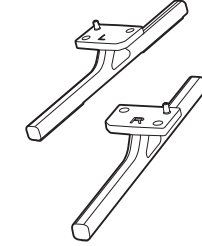

55"/65"

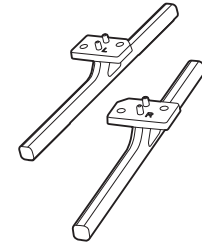

77"

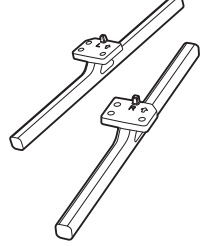


PHILIPS



48"(M5xL16) : x4
55"(M4xL18) : x4
65"(M4xL20) : x4
77"(M5xL22) : x6

55"/65": x4


(EU)

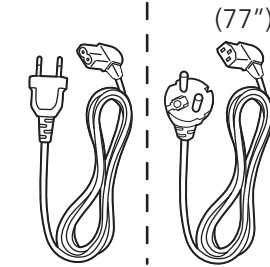

(UK)

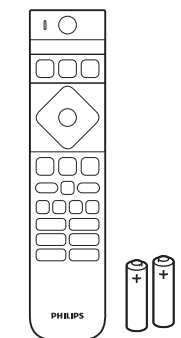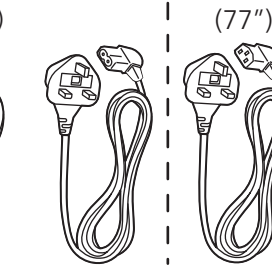


1 48"/55"

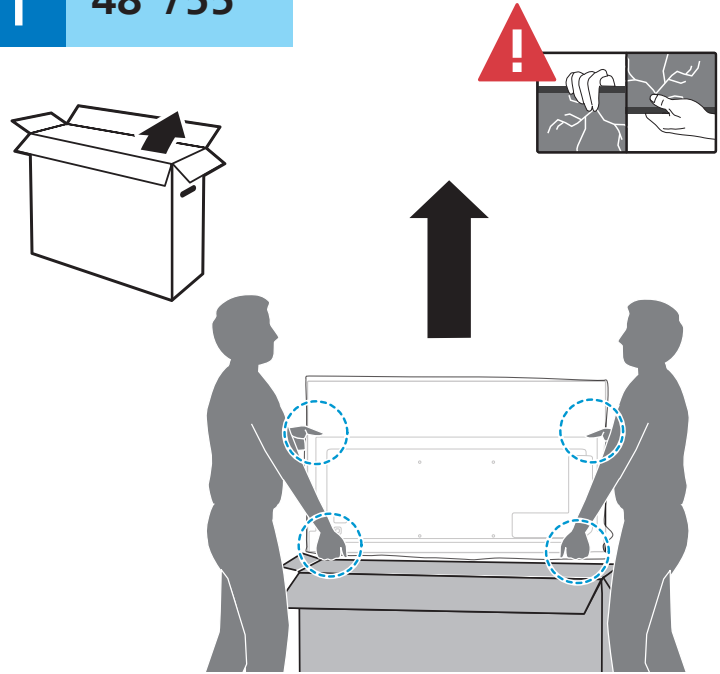


65"


77"

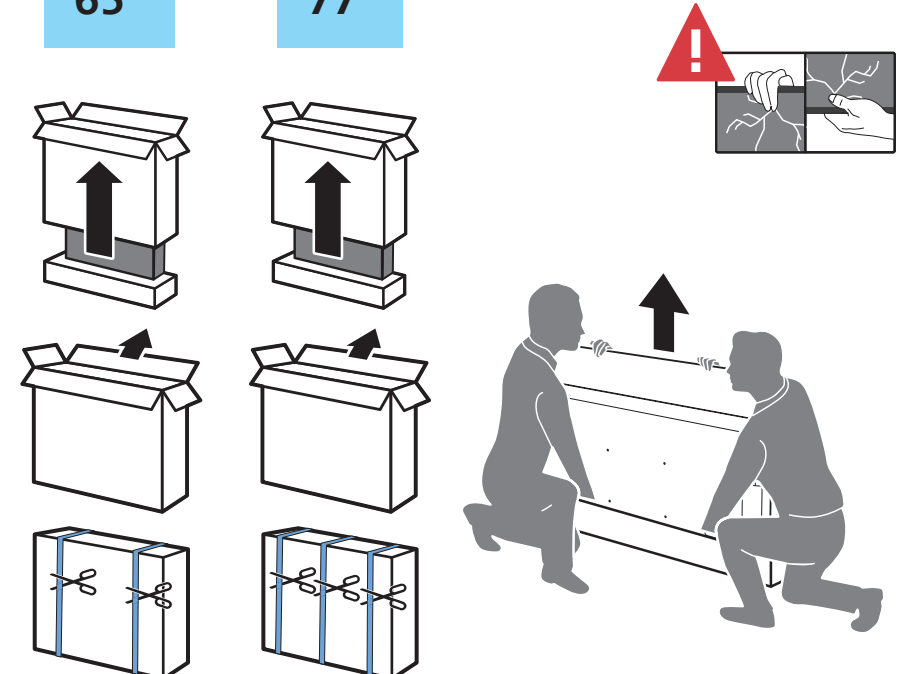


2

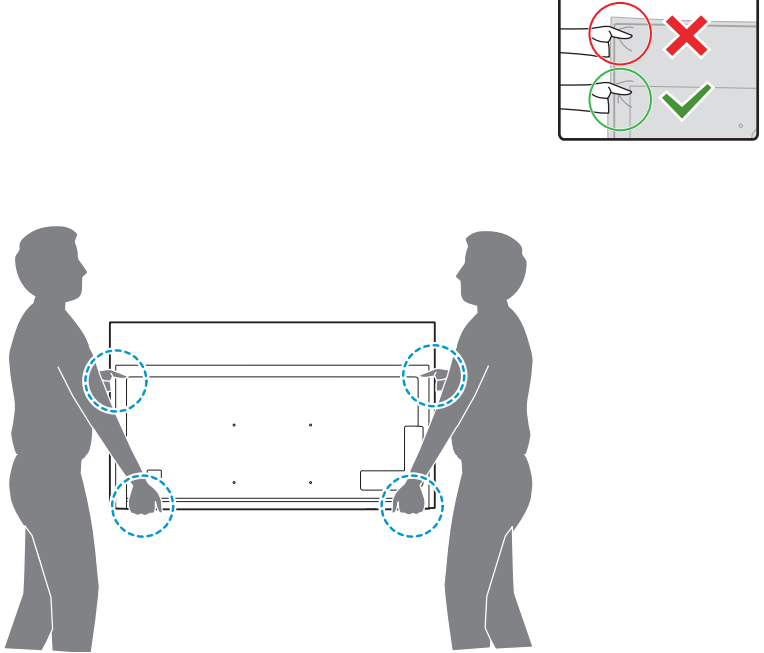



3

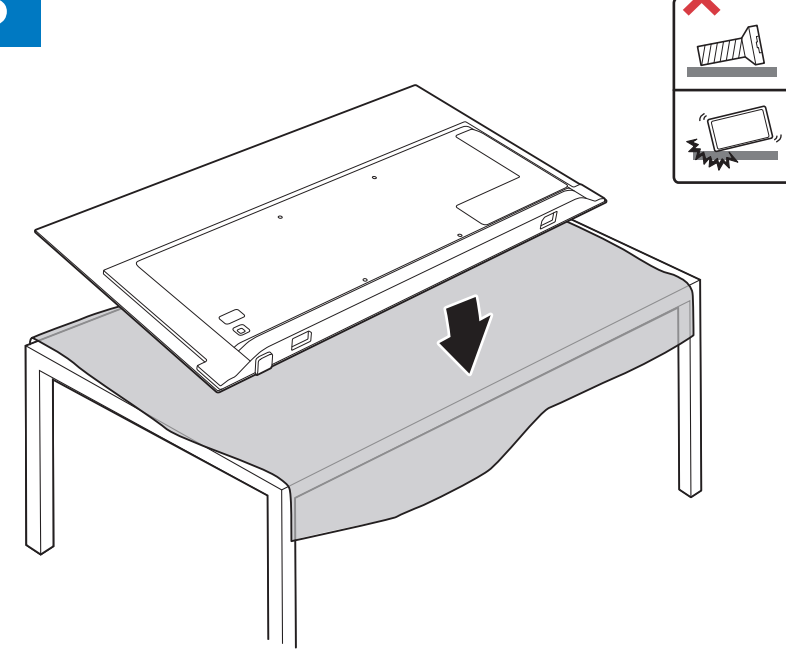

A Desk Placement

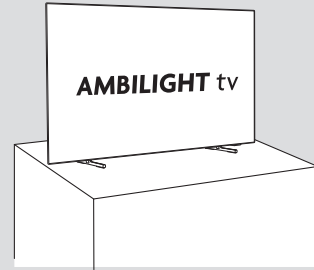


B Wall Placement

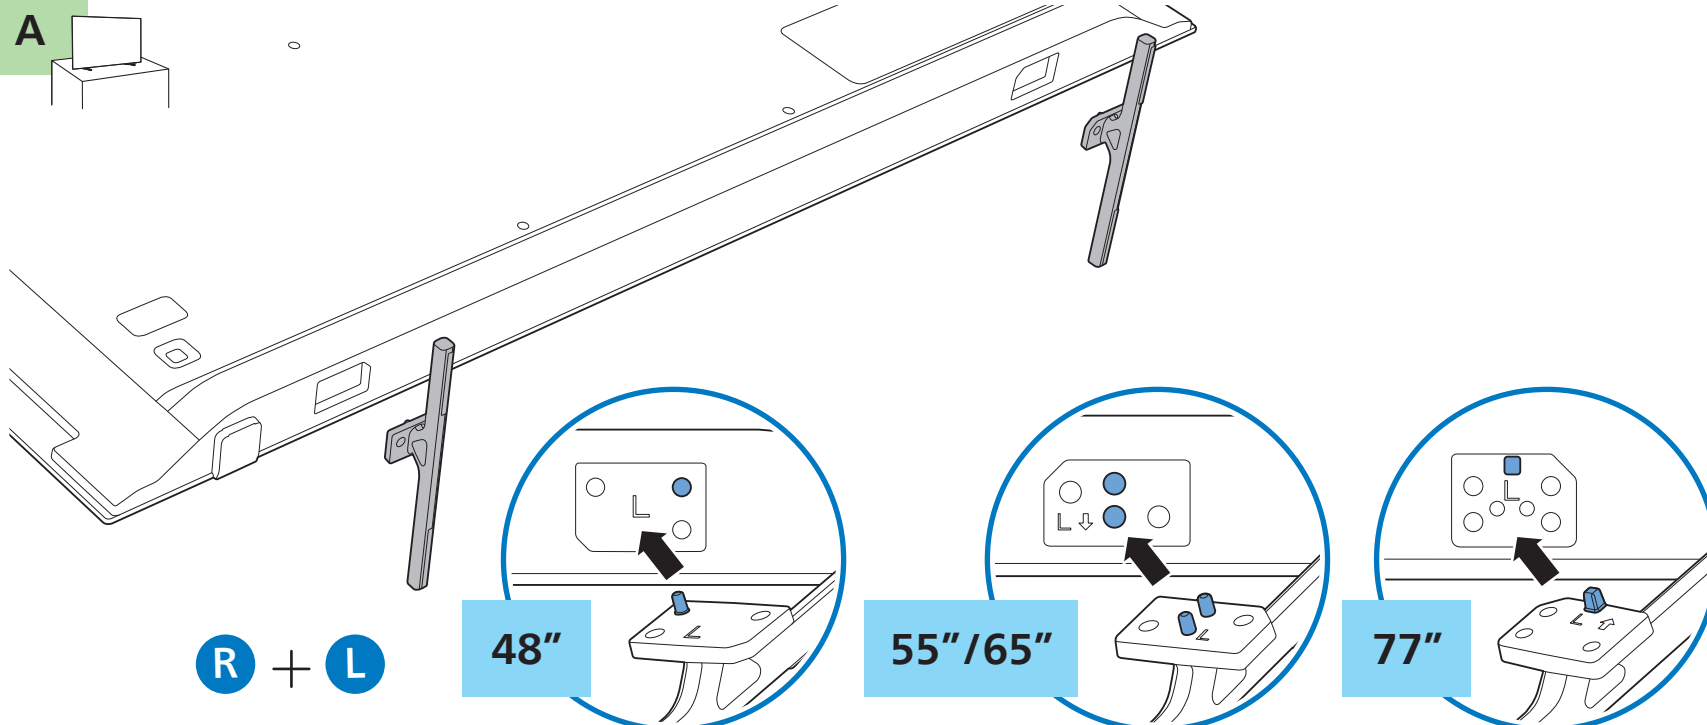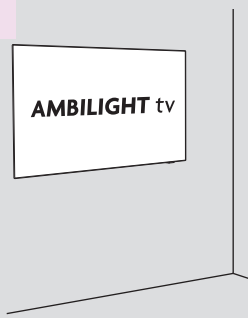


48"/55"/65"

R

L

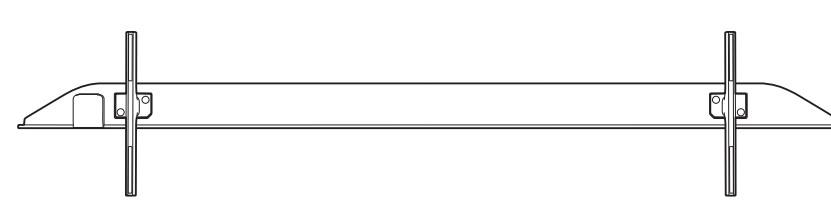


77"

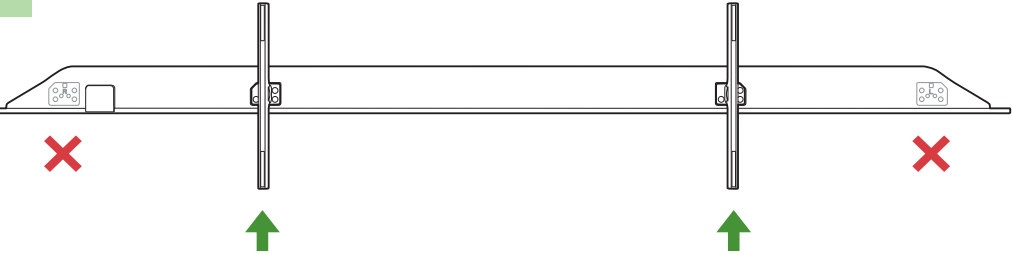


Recommended Wall Distance

10-20 cm

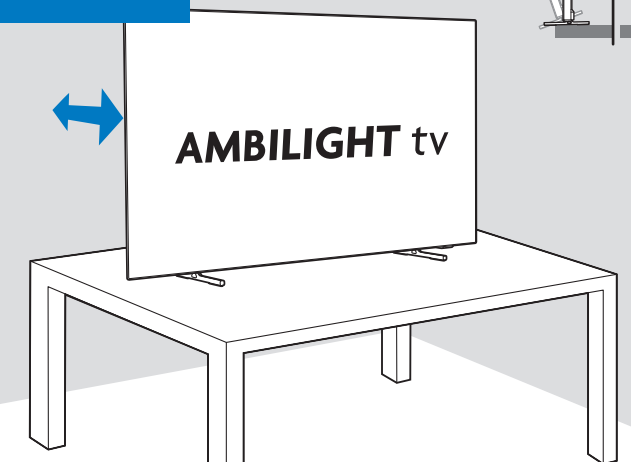


Diagonal (inch/cm)	X (mm)	Y (mm)	Screw Size	Screw Length (mm)
48" / 121	300	300	M6	10-15
55" / 139	300	300	M6	10-15
65" / 164	300	300	M6	10-15
77" / 194	400	300	M6	10-22

1

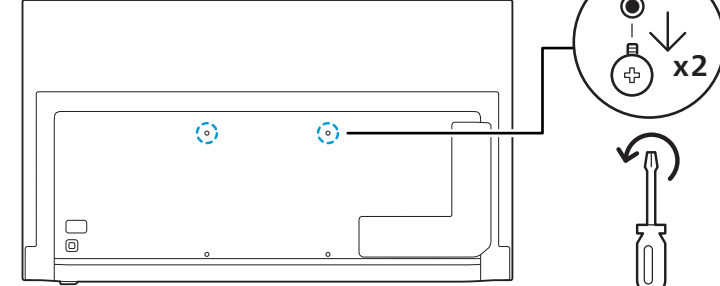

2

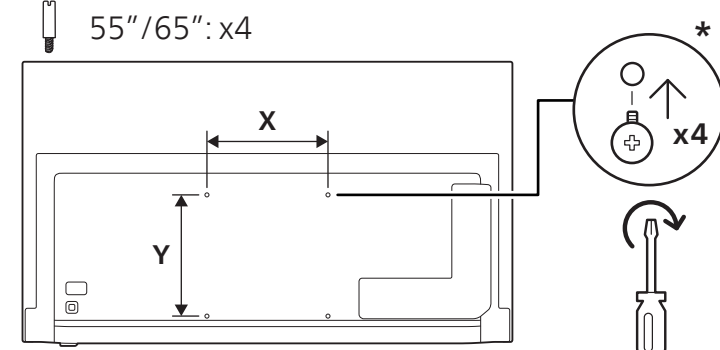

Recommended Wall Distance

7-10 cm



4

Get Connected



www.philips.to/smartTV

The Philips Smart TV app lets you switch channels and adjust the volume - just like a remote control.


5

Register and Support



www.philips.com/TVsupport

Register your TV, find out more, download the user manual and get support

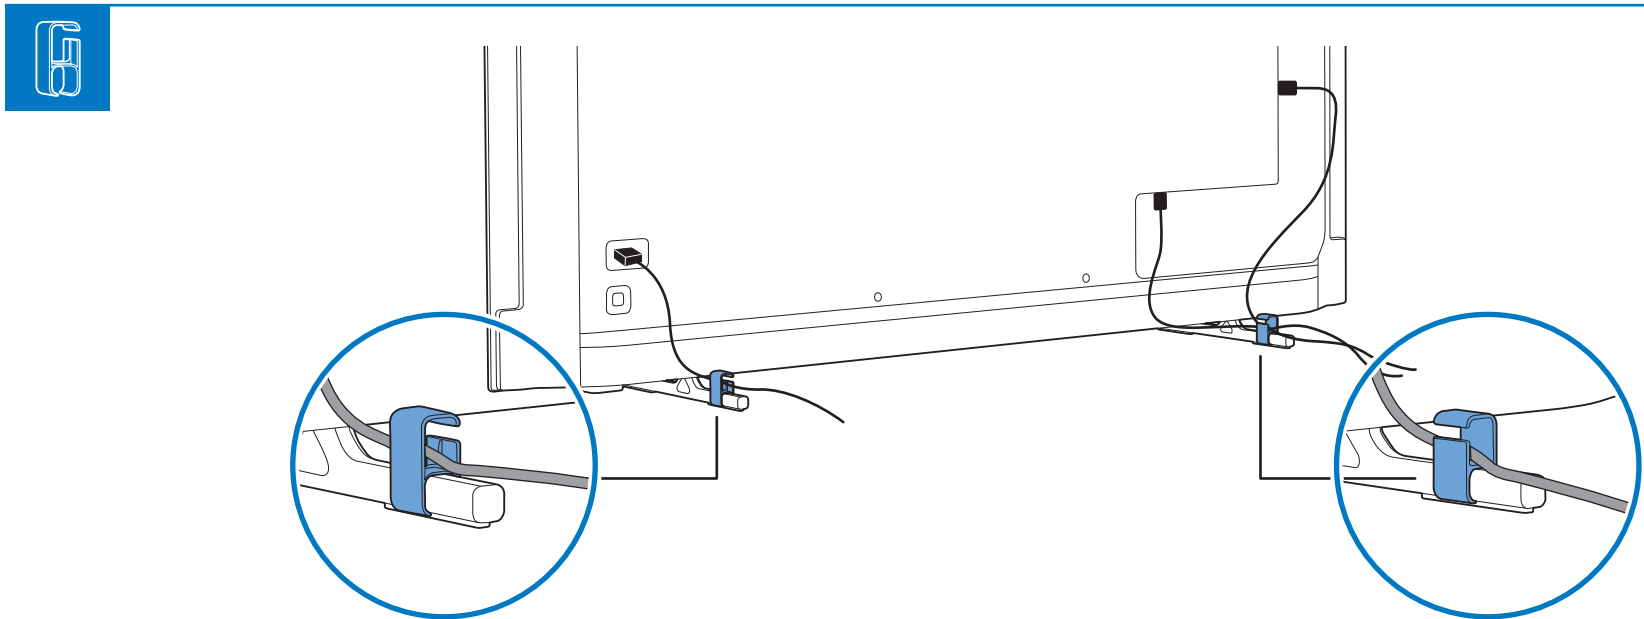

English	Read the safety instructions.	Français	Lisez les consignes de sécurité.	Português	Leia as instruções de segurança.	Türkçe	Güvenlik talimatlarını okuyun.
Български	Прочетете инструкциите за безопасност.	Italiano	Leggere le istruzioni di sicurezza.	Română	Citiți instrucțiunile de siguranță.	Українська	Читайте інструкції з техніки безпеки.
Čeština	Přečtěte si bezpečnostní pokyny.	Қазақша	Қорғаныстық нұсқаулар.	Русский	Читайте инструкции по технике безопасности.	العربية	قراءة تعليمات السلامة.
Hrvatski	Pročitajte sigurnosne upute.	Latviešu	Izlasiet drošības norādījumus.	Srpski	Pročitajte bezbednosna uputstva.	עברית	קראו את הוראות הבטיחות.
Dansk	Læs sikkerhedsforskrifterne.	Lietuvių	Perskaitykite saugos instrukcijas.	Slovenščina	Preberite varnostna navodila.		
Deutsch	Lesen Sie die Sicherheitshinweise.	Magyar	Olvassa el a biztonsági utasításokat.	Slovenský	Prečítajte si bezpečnostné pokyny.		
Ελληνικά	Διαβάστε τις οδηγίες ασφαλείας.	Nederlands	Lees de veiligheidsvoorschriften.	Suomi	Lue turvaohjeet.		
Eesti	Lugege ohutusnõudeid.	Norsk	Les sikkerhetsforskriftene.	Svenska	Läs säkerhetsinstruktionerna.		
Español	Lea las instrucciones de seguridad.	Polski	Zapoznaj się z instrukcjami bezpieczeństwa.	ภาษาไทย	โปรดอ่านคำแนะนำด้านความปลอดภัย.		

FSC Logo
H:12mm



1

To install batteries, slide the battery door up.

2

Use 2x AAA LR03 1.5V (included)

3

Slide battery door back in place.

1 2 3 4

PHILIPS

?

Help

3 sec

PAIR

$\leq 1m$

alexabuilt-in

3 sec

PAIR

COMMON INTERFACE

HDMI 3/4

HDMI 2 ARC/eARC

HDMI 1

POWER (EU) (77")

POWER (EU) (77")

POWER (UK) (77")

POWER (UK) (77")

SAT (EU)

TV ANTENNA

HEADPHONE

USB 1

USB 2

DIGITAL AUDIO OUT

NETWORK


SATELLITE COAXIAL

COAXIAL

TOSLINK

ROUTER

ROUTER

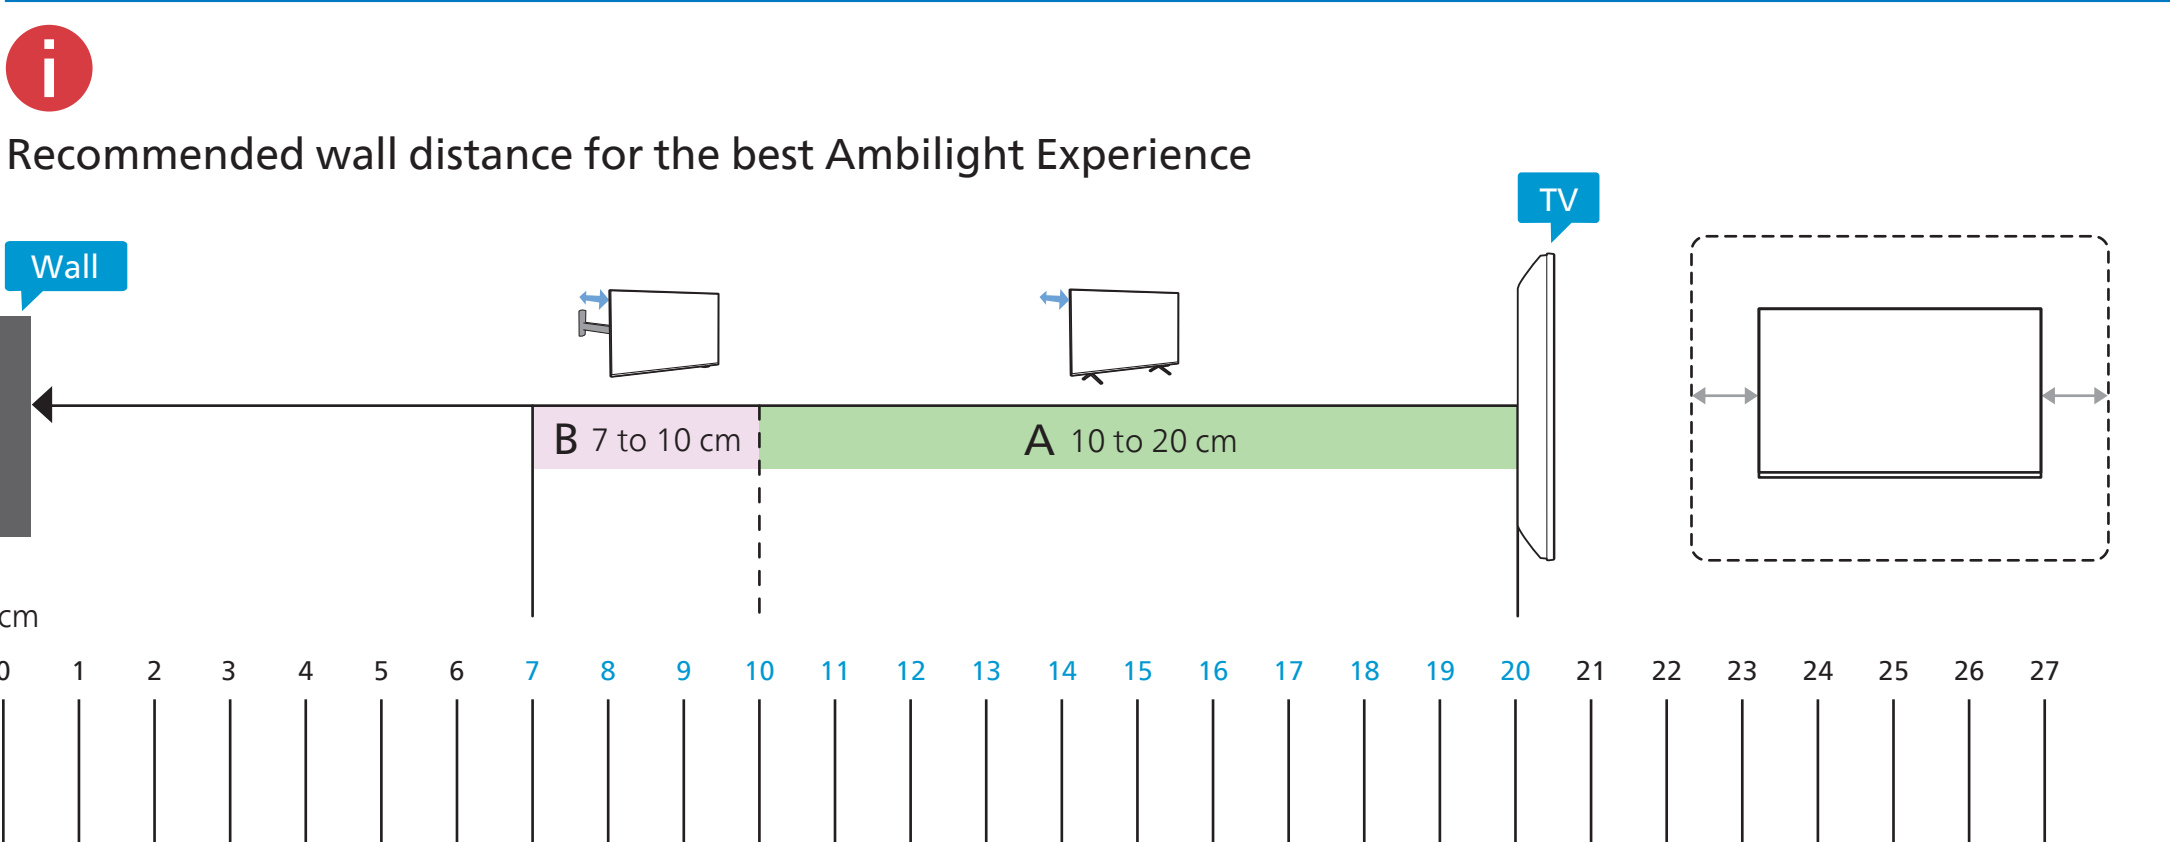

PHILIPS

All registered and unregistered trademarks are property of their respective owners. Specifications are subject to change without notice. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of TP Vision Europe B.V., and TP Vision Europe B.V. is the warrantor in relation to this product. 2025 © TP Vision Europe B.V. All rights reserved. www.philips.com/welcome