 


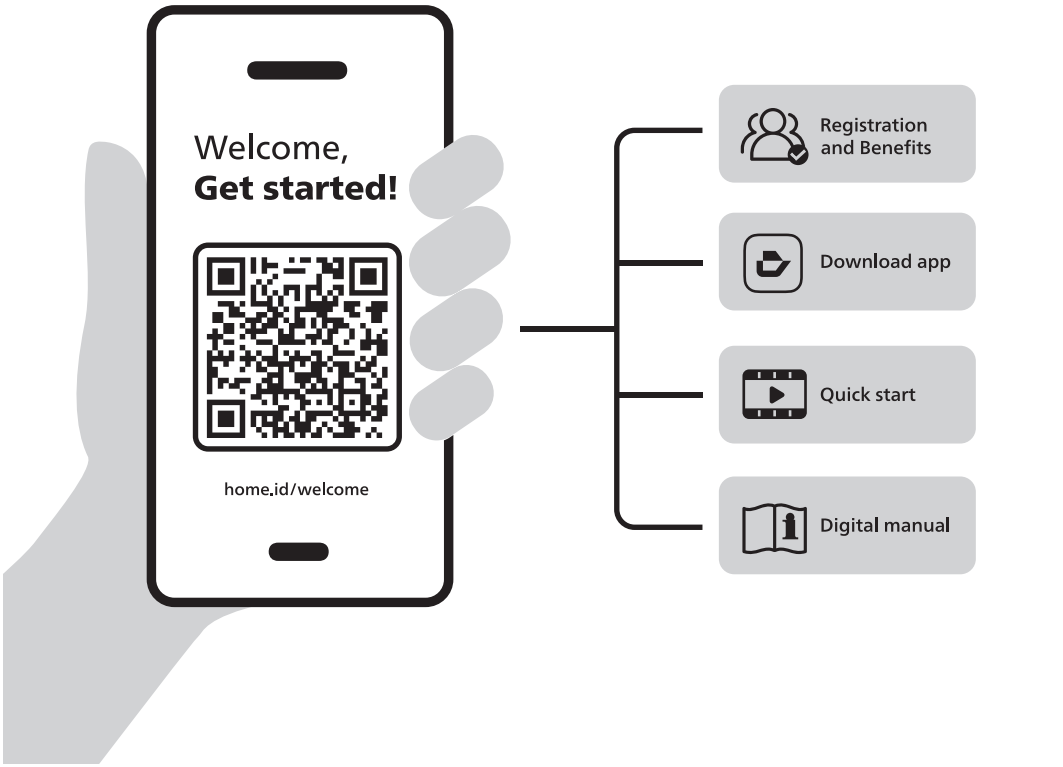

EN Welcome, Get started! ES Bienvenidos, ¡comencemos! DE Willkommen! Legen Sie los! EL Καλωσόρισμα, ας ξεκινήσουμε! FR Bienvenue, débutez! GB Добро дошли, започнете! HU Üdvözlünk! Kezdjünk is hozzá! IT Ti diamo il benvenuto. Iniziamo! JA バンウェル、はじめよう! KO 안녕하세요, 시작합니다! LT Sveiki, pradėkite naudotis! LV Laipni lūgti, viss gatavs lietošanai! NL Welkom, aan de slag! NO Velkommen, kom i gang! PL Witaj, zaczynajmy! PT Bem-vindo, vamos começar! RO Bine ai venit, începe! RU Добро пожаловать, приступим! SK Vitajte, začíname! SL Dobrodošli, začnite! SR Miri se vini, fillojmi! SV Dobro došli, započnite! TR Varmen, başla! UK Вітаємо, розпочнімо! ZH 你好，开始吧!

EN Registration and Benefits ES Registro y ventajas DE Registrierung und Vorteile EL Δήλωση και πλεονεκτήματα FR Enregistrement et avantages GB Rekisterointi ja edut HU Regisztráció és előnyök IT Registrazione e vantaggi JA ティケツとベネフィット KO 등록금과 혜택 LT Registracija ir privalumai LV Registrācija un priekšrocības NL Registratie en voordelen NO Registrering og fordeler PL Rejestracja i korzyści PT Registo e vantagens RO Înregistrare și beneficii RU Регистрация и преимущества SK Registrácia a výhody SL Registracija in ugodnosti SR Registrirani i prednosti SV Registrering och fördelar TR Kayıt ve Avantajlar UK Реєстрація та переваги ZH 注册和好处







EN Download app ES Descargar aplicación DE App herunterladen EL Αφαίρεση εφαρμογής FR Télécharger l'application GB App herunterladen HU Letöltés a programra IT Scarica l'applicazione JA アプリケーションをダウンロード KO 앱 다운로드 LT App atsisiųsiti LV App lejupielādēt NL App downloaden NO App last ned PL Pobierz aplikację PT Descarregar aplicação RO Descarcă aplicația RU Загрузить приложение SK Prevziať aplikáciu SL Prenos aplikacije SR Preuzimanje aplikacije TR App'i indir UK Завантаження додатка ZH 下载应用程序

EN Quick start ES Inicio rápido DE Schnellstart EL Σύντομος οδηγός FR Démarrage rapide GB Brzo pokretanje HU Gyorsindítás IT Guida rapida JA 簡単なスタート KO 빠른 시작 LT Greitisis įjungimas LV Īsi norādījumi lietošanai NL Snel aan de slag NO Hurtigstart PL Szybki start PT Início rápido RO Pomre rapidă RU Начало работы SK Rýchle spustenie SL Hitri začetek SR Hapat e parë SV Brzo pokretanje TR Hızlı başlangıç UK Короткий посібник ZH 快速开始

EN Digital manual ES Manual digital DE Digital manual EL Ψηφιακό εγχειρίδιο FR Manuel numérique GB Digital manual HU Digitális kézikönyv IT Manuale digitale JA デジタル取扱説明書 KO 디지털 사용설명서 LT Digitalinis rankovinis vadovas LV Digitālā rokasgrāmata NL Digitale handleiding NO Digital håndbok PL Elektroniczna instrukcja obsługi PT Manual digital RO Manual digitală RU Цифровое руководство SK Digitálna príručka SL Digitalni priročnik SR Manual digital TR Digital kullanım kılavuzu UK Дигітальний посібник ZH 数字手册

PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product. 2024 © Versuni Holding B.V. 642001017402 (28/11/2024)

			Min.	
		5	13 - 15	
		5	14 - 16	
		5	14 - 16	
		5	8 - 10	
		5	8 - 10	
		5	30 - 35	
		5	25 - 30	
		4	16 - 18	
		4-5	14 - 16	
		5	8 - 10	
		5	18 - 20	
		5	16 - 18	
		4	6-8	
		4	10 - 12	
		4	10 - 12	
		1 - 2	-	
		2 - 3	-	

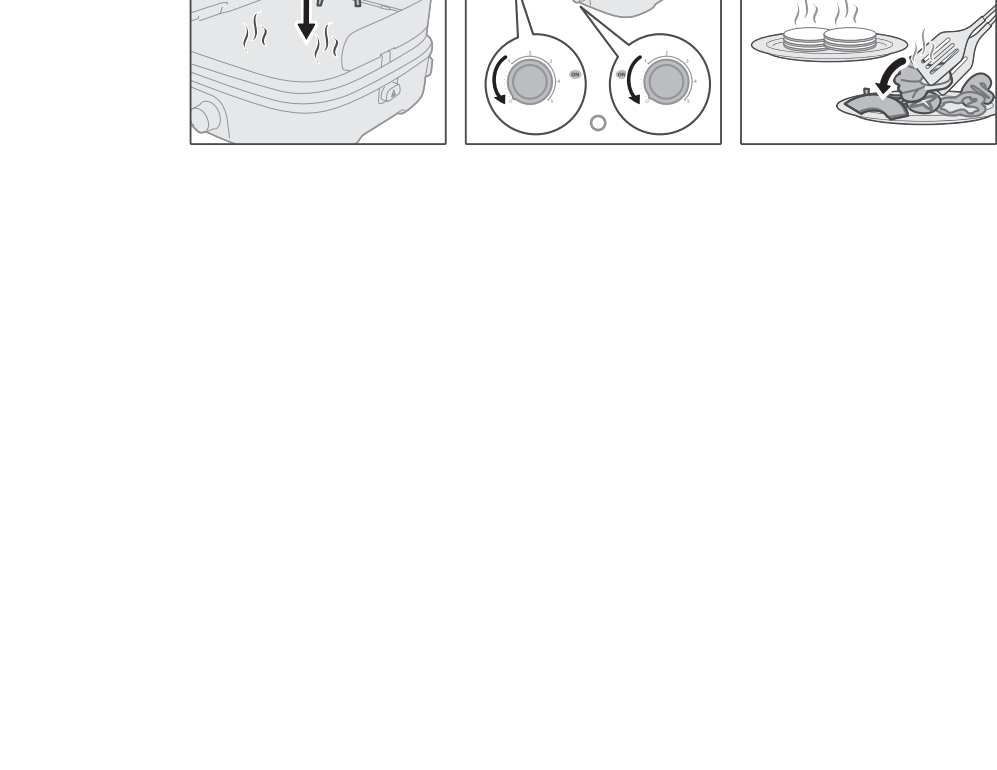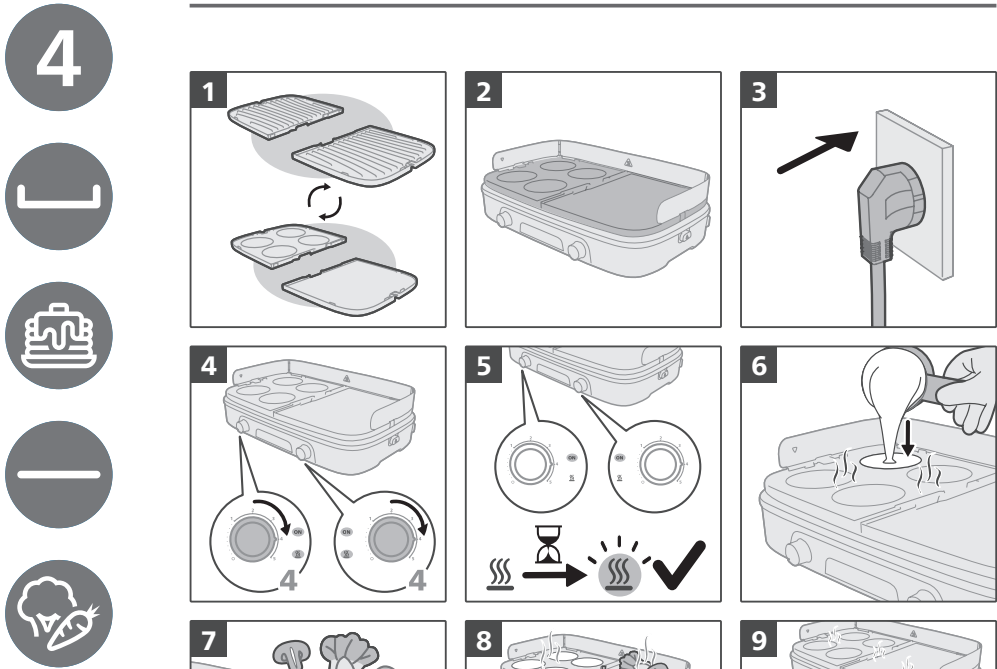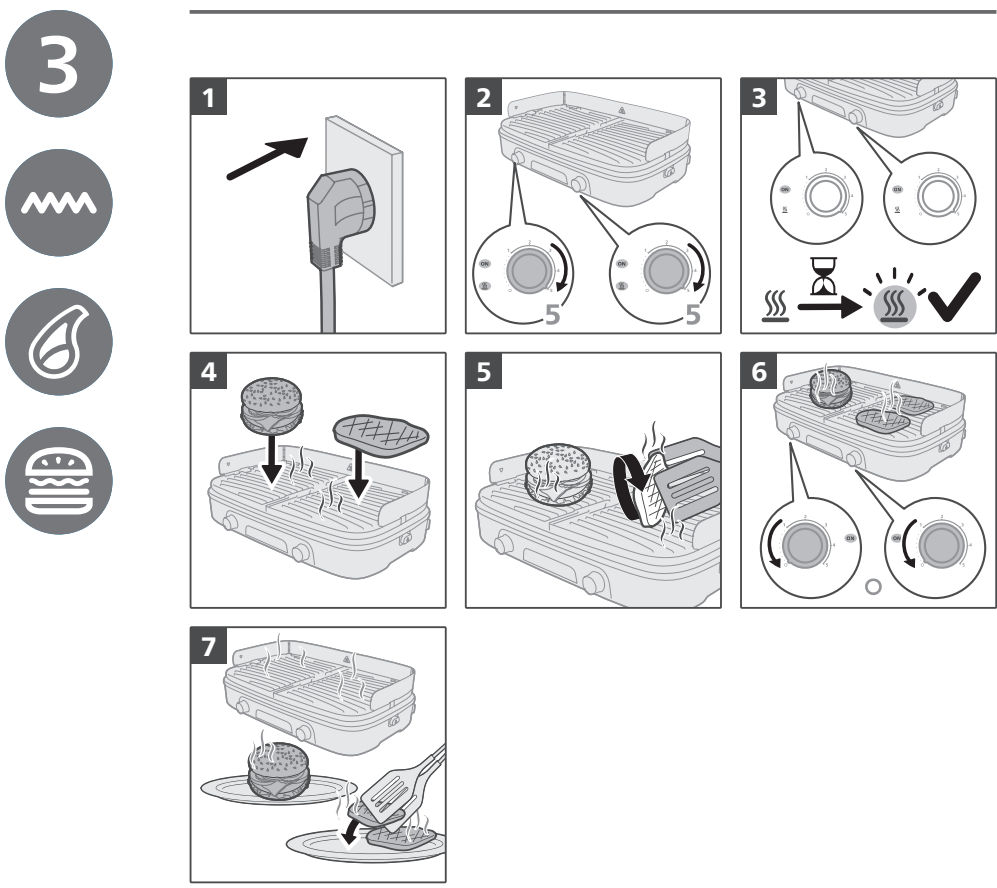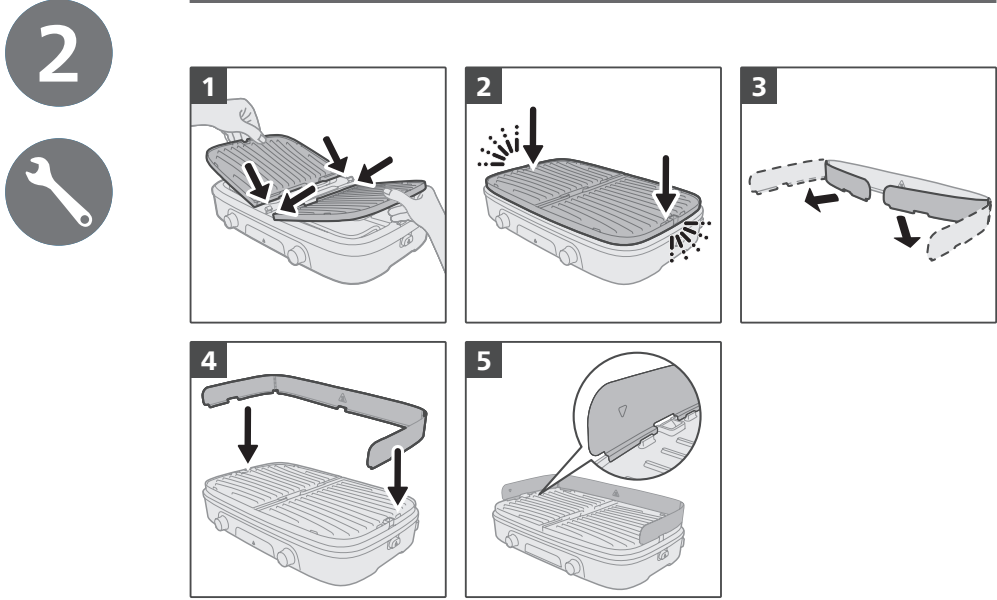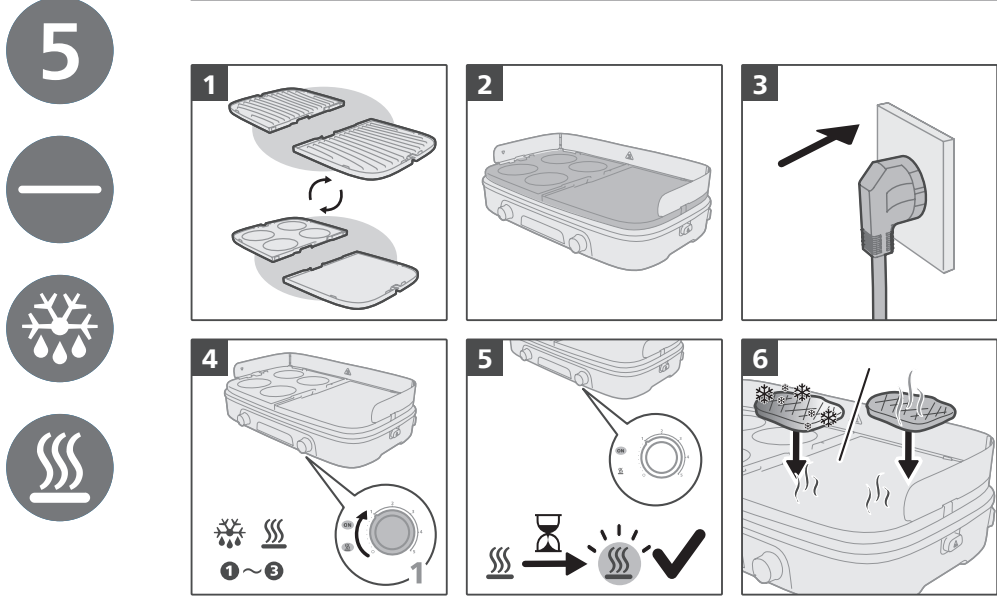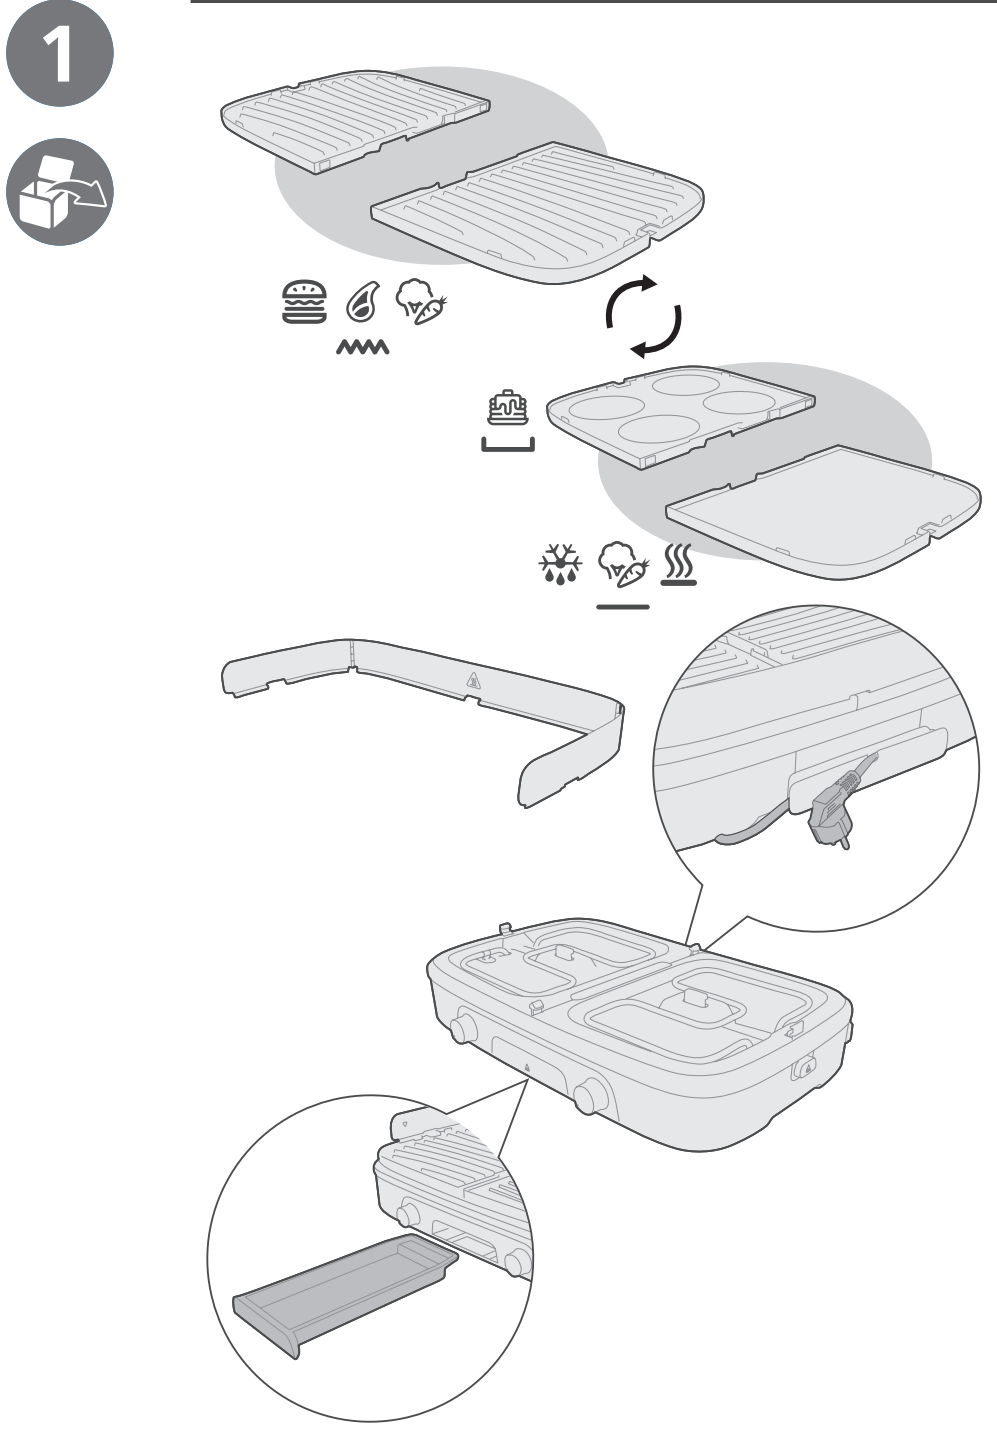      

English

Introduction

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important

Read this important information leaflet carefully before you use the appliance and save it for future reference.

Danger

Do not immerse the appliance or the mains cord in water or any other liquid.

Warning

Place the device on a flat, horizontal, dry, non-slippery surface.

Be careful not to place the appliance at the edge of the table or worktop to prevent it from tipping over.

Make sure that the power cord and any extension cord are not placed in the places of passage to avoid tripping.

Never move the appliance while it is in operation.

Never use the appliance outdoors.

Do not allow plastic utensils or other heat-sensitive materials to come into contact with the plates during cooking.

Do not touch the plate release latches or the anti-spatter cooking baffle plate during operation to prevent scalding.

To avoid spoiling your product, do not use flammable recipes in connection with it at any time.

Do not place food on the grill that is wrapped with plastic, polythene or foil paper as it may start fire or damage the plates.

Do not use metal spatula to fry or stir to avoid damage the heating plates.

Always attach the two plates to the appliance when in use.

Check if the voltage indicated on the bottom of the appliance corresponds to the local mains voltage before you connect the appliance.

Do not use the appliance if the plug, the mains cord or other parts are damaged.

Keep the mains cord away from hot surfaces.

Never connect this appliance to an external timer switch in order to avoid a hazardous situation.

Do not let the appliance operate unattended.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

Keep the appliance and its cord out of reach of children less than 8 years.

The appliance is not intended to be operated by means of an external timer or a separate remote control system.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

The accessible surfaces may become hot during use.

Caution

This appliance is intended for normal household use only. It is not intended for use in environments such as staff kitchens of shops, offices, farms or other work environments. Nor is it intended to be used by clients in hotel, motels, bed and breakfasts and other residential environments.

Only connect the appliance to an earthed wall socket.

Do not let the mains cord hang over the edge of the table or worktop on which the appliance stands.

The temperature of accessible surfaces may be high when the appliance operates.

Let the appliance cool down completely before you clean the appliance or put it away.

Never touch the plates with sharp or abrasive items, as this damages the non-stick surface.

Always switch off and unplug the appliance after use.

In order to get the best result from your grill, always clean the appliance after every use. When you remove the grills, clean the exposed heating elements with a cloth. Be careful not to drop any water on these pads.

Electromagnetic fields (EMF)

This appliance complies with the applicable standards and regulations regarding exposure to electromagnetic fields.

Ordering accessories

To buy accessories or spare parts, visit www.philips.com/support or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

Recycling

This symbol means that electrical products shall not be disposed of with normal household waste.

Follow your country's rules for the separate collection of electrical products.

Warranty and support

Versuni offers a two-year warranty after purchase on this product. This warranty is not valid if a defect is due to incorrect use or poor maintenance. Our warranty does not affect your rights under law as a consumer. For more information or for invoking the warranty, please visit our website www.philips.com/support.

