


Setup Guide


Өнім атауы: Теледидар



5-048-177-31(1)

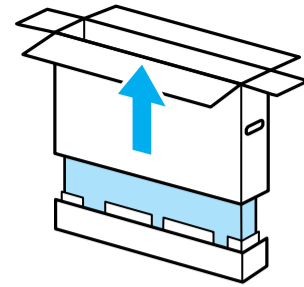

EE	Seadistusjuhend	SI	Priločnik za pripravo
LV	Uzsākšanas ceļvedis	KZ	Орнату нұсқаулығы
LT	Nustatymo vadovas	SR	Vodič za podešavanje
HR	Vodič za postavljanje	HE	מדריך הדרה

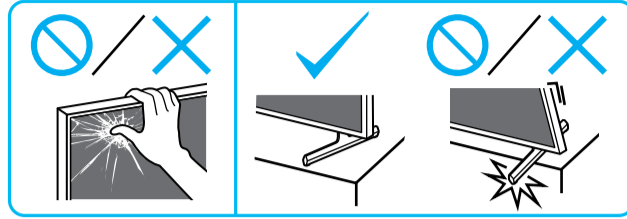

1

*2

*1

75
65
55

*2 1.5 N·m/1.5 N·m (15 kgf·cm)

2

SB1 SB2

1 2 3

3

4

*2

5

75 ① ②

65 ① ②

55

SB2 CL

75 ① ②

SB1 CL

65 ① ②

55

SB1 CL

*2

75 ① ②

65 ① ②

55

SB1 CL

75 ① ②

65 ① ②

55


SB2 CL

*1 Vt Teatmikku / Skatiet atsauces ceļvedi / Žr. trūpāji vadovā. / Pogledajte Referentni vodič / Glejte referenčni priročnik / Анықтама нұсқаулығын қараңыз / Pogledajte Referentni vodič / עין במדריך העיון


*2 Ainult teatud piirkondade/riikide/mudelite jaoks. / Tikai dažiem reģioniem/valstīm/modeliem. / Tik kai kuriuose regionuose / šalyse / modeliuose. / Samo za određenu regiju/zemlju/model. / Samo za omejene regije/države/modele. / Тек шектеулі аймақтарда/елдерде/үлгілерде. / Samo za ograničen region/zemlju/model. / רק באזורים/במדינות/בדגמים מסוימים




6

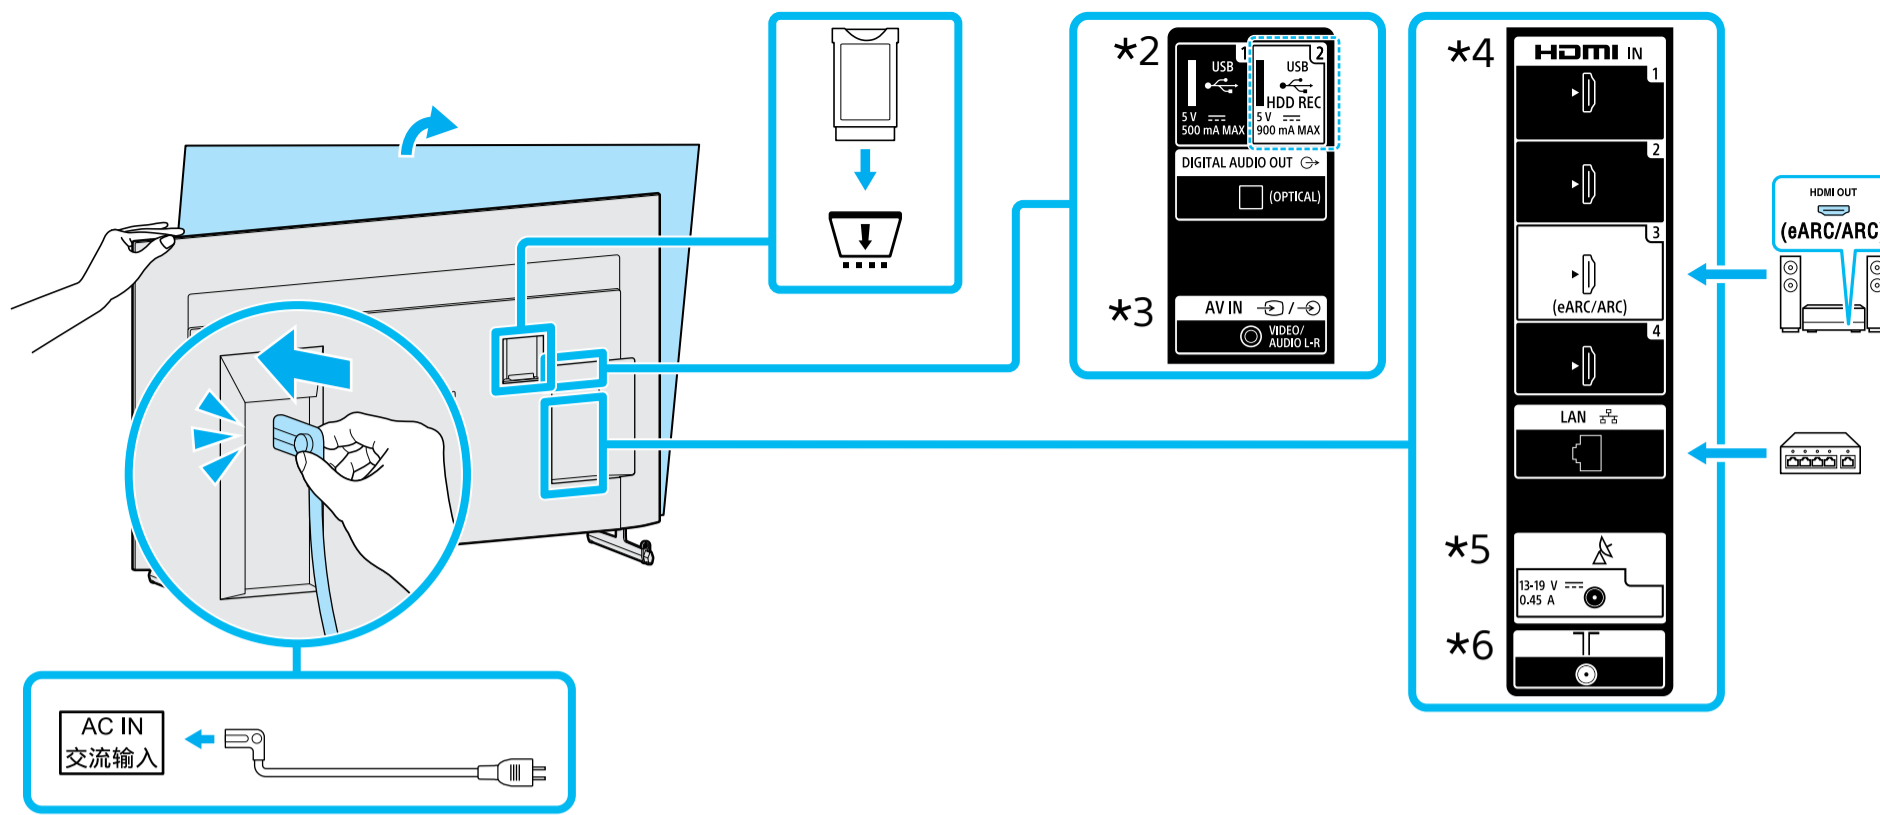


7

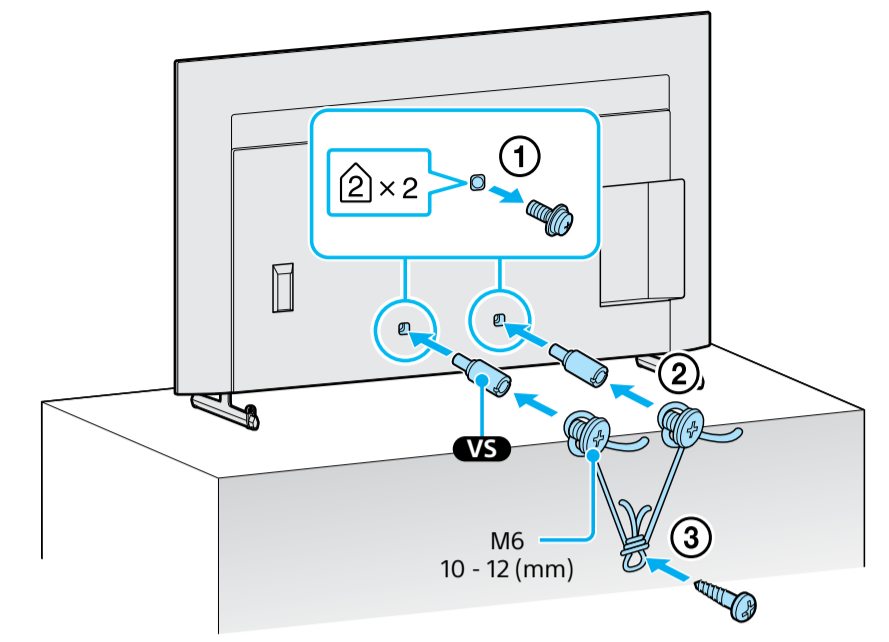





8

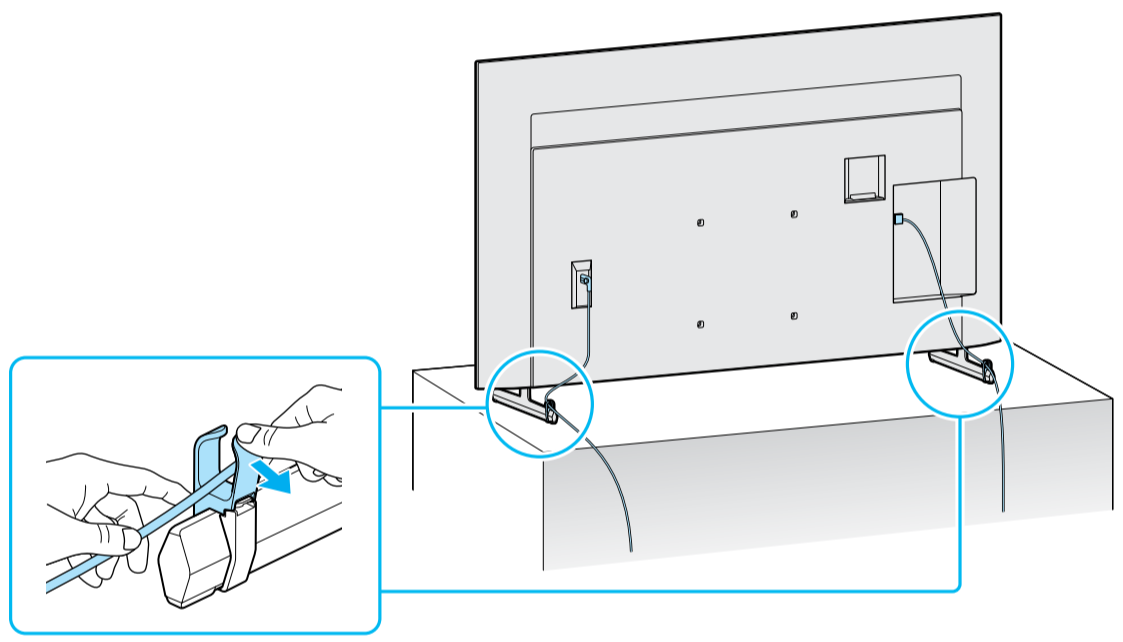

9

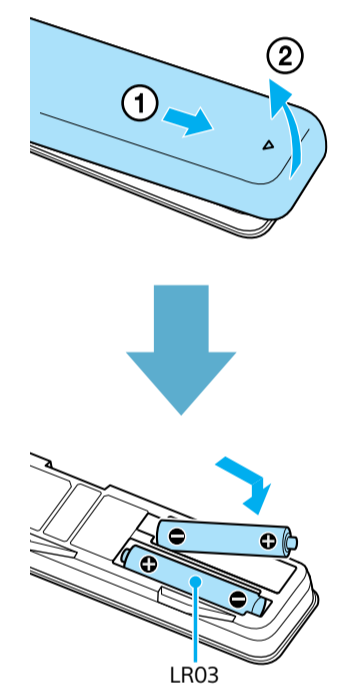

10

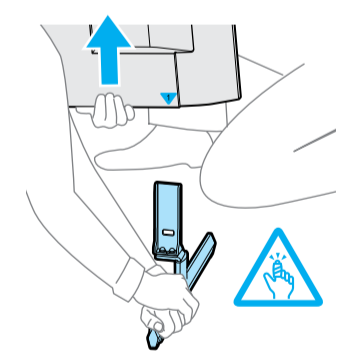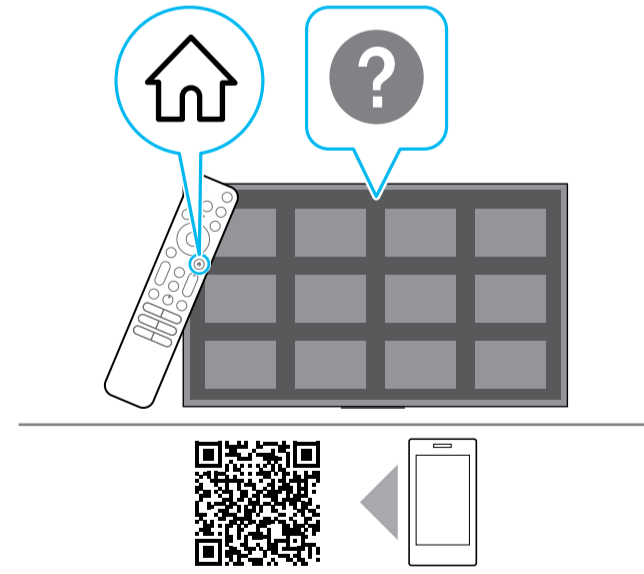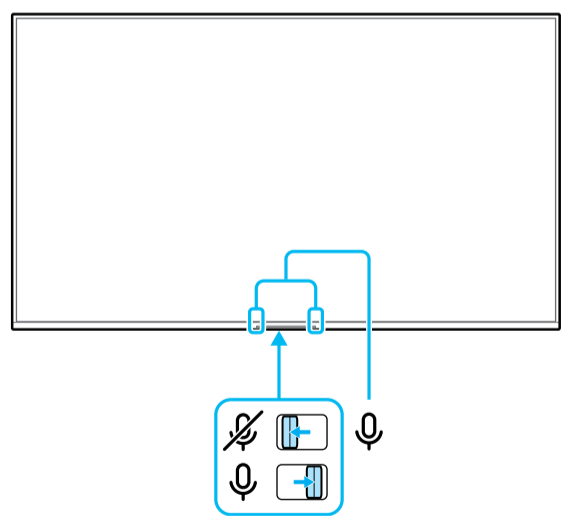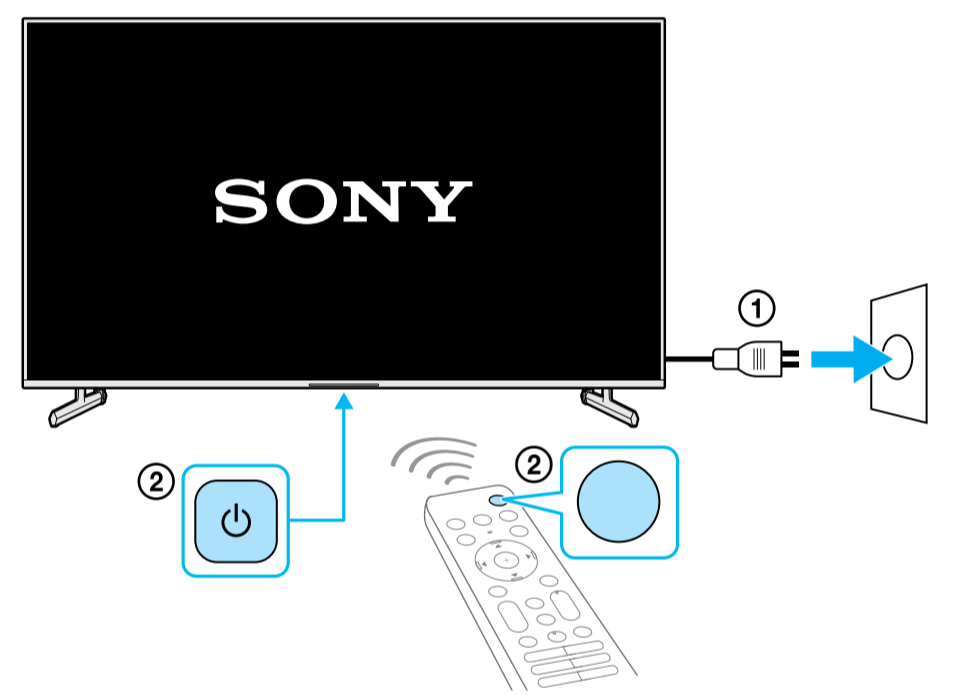

<https://www.sony.eu/support>

*3 3.5/3.5 (mm) 1 2 3 4

*4 < 21 (mm) < 12 (mm)

*6 < 14 (mm)

*5 < 7 (mm) < 1.5/1.5 (mm)

1 : L
2 : Video / Vaizdo medžiaga / Бейне / וידאו
3 : GND
4 : R

(mm) / (MM) / (מ״מ)